

Field-installable Connector Assembly Manual

现场快速组装型光纤接头组装手册

- 1、Unpack the bag and take out the parts.
打开包装袋，把里面的部件拿出来。




- 2、Insert the boot to the fiber and strip the fiber jacket.
拆开包装后，把尾套穿到光纤上，并剥离光纤外皮。



- 3、Mark a mark on the fiber as below.
如图所示，在光纤上做一个标记。




- 4、Strip the fiber from the mark.
用剥纤钳从标记点将光纤涂覆层剥离。

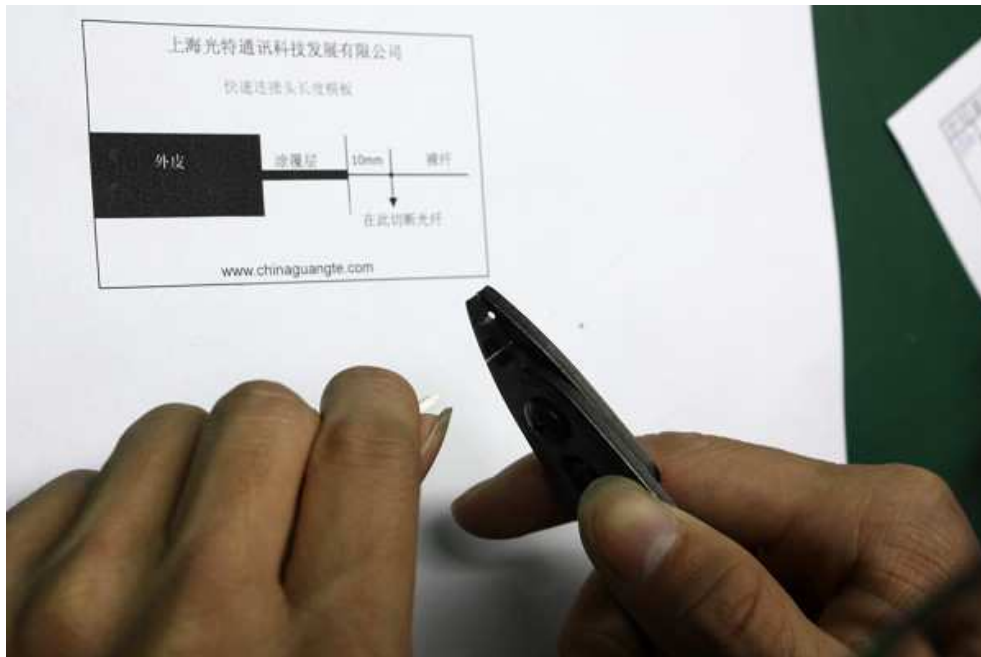

- 5、 Make a mark on the bare fiber as below.
如图所示，再在裸纤上做一个标记。



- 6、 Cleave the fiber from the mark with fiber cleaver.
用光纤切割刀从标记点处将光纤切断。

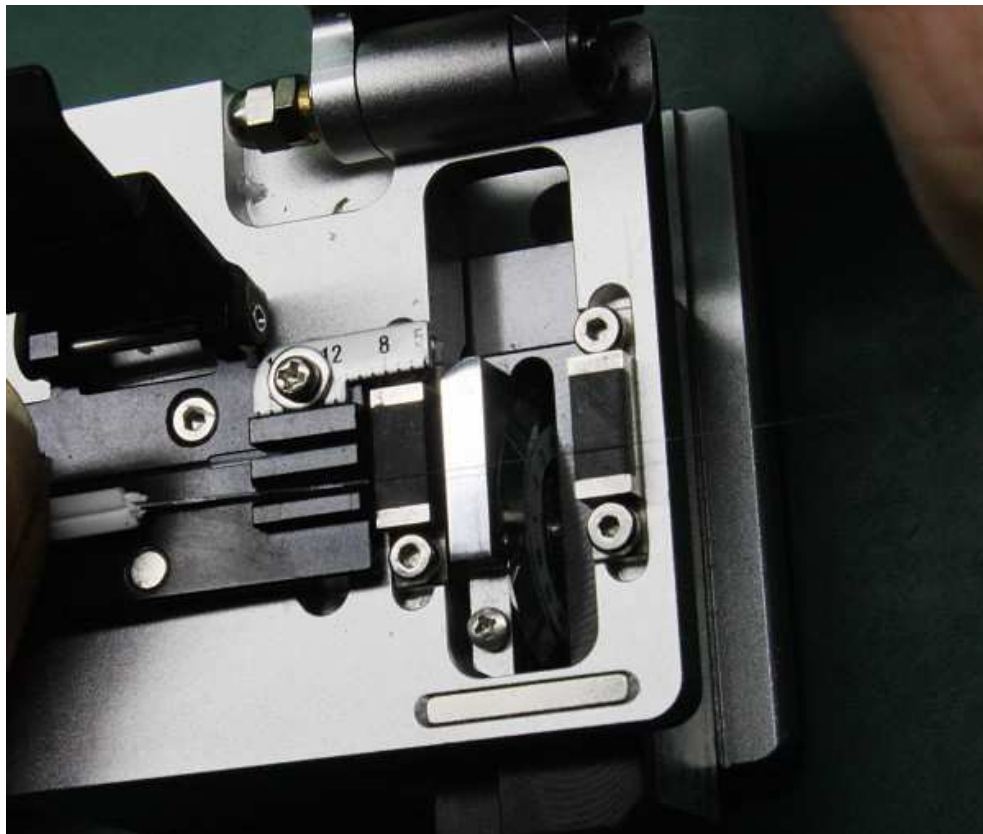

- 7、Wipe the fiber with a piece of tissue (It's better to use tissue with alcohol).
用无尘纸将光纤擦干净（最好是用无尘纸沾上少许酒精）。



- 8、Insert the fiber into the connector slowly until it's stopped by clip of connector body. At this time, we can see the fiber from black body is slight bending, that's what we need.
将制备好的光纤慢慢插入到连接头里直到光纤被连接头黑色框体内的小夹子挡住。这个时候我们可以看到里面的光纤是有微小的弯曲，这是我们需要。



- 9、 Hold the connector and push on the boot and screw it on. Don't pull the fiber during the assembling.

捏住连接头，把尾套推上来并旋转组装到连接头上。注意在操作过程中不要拉到光纤。



- 10、 FIC done.

FIC 组装完成。

